


Washing Machine Instructions

CONTROL PANEL

1. "ON/OFF" button
2. Programme selector
3. "Start/Pause" button
4. "Temperature" button
5. "Spin" button
6. "Start delay" button
7. "Key lock" button
8. Option buttons

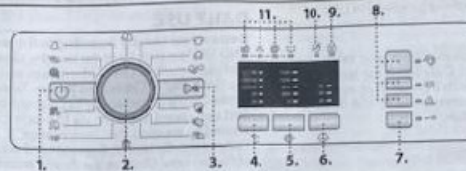

LED INDICATORS

9. Door locked
 10. Cycle end
 11. Washing phase
- Indicates washing phase of the cycle

PROGRAMME CHART

		Max load 6 Kg Power consumption in off-mode 0.5 W / in left-on mode 8.0 W				Detergents and additives			Recommended detergent		Residual dampness %	Energy consumption kWh	Total water lt	
Programme	Icon	Temperatures		Max. spin speed (rpm)	Max load (kg)	Duration (Minutes)	Prewash	Main wash	Softener	Powder				Liquid
		Default	Range				I	II		✓	✓			
Mixed		40°C	⊕ -40°C	1000	3.5	60	—	●	○	—	✓	—	—	—
White		60°C	⊕ -90°C	1200	6.0	170	● (90°)	●	○	✓	✓	—	—	—
Cotton		40°C	⊕ -60°C	1200	6.0	220	—	●	○	✓	✓	53	0.98	75
e Cotton		60°C	⊕ -60°C	1200	6.0	220	—	●	○	✓	✓	53	1.02	50
			⊕ -40°C	1200	6.0	220	—	●	○	✓	✓	53	0.98	75
Sport		40°C	⊕ -40°C	600	3.5	90	—	●	○	—	✓	—	—	—
Duvet		30°C	⊕ -30°C	1000	2.0	110	—	●	○	—	✓	—	—	—
Jeans		40°C	⊕ -40°C	800	3.5	70	—	●	○	—	✓	—	—	—
Spin + Drain		—	—	1200	6.0	10	—	—	—	—	—	—	—	—
Rinse + Spin		—	—	1200	6.0	50	—	—	○	—	—	—	—	—
Rapid 30'		30°C	⊕ -30°C	800	3.0	30	—	●	○	—	✓	—	—	—
Colours 15'		15°C	15°C	1000	3.5	90	—	●	○	—	✓	—	—	—
Wool		40°C	⊕ -40°C	800	1.5	75	—	●	○	—	✓	—	—	—
Delicates		30°C	⊕ -30°C	—	1.0	80	—	●	○	—	✓	—	—	—
Synthetics		40°C	⊕ -50°C	1200	4.0	195	—	●	○	✓	✓	33	0.75	72

● Dosing required ○ Dosing optional

⊕ Cotton - Test wash cycles in compliance with regulations 1061/2010

These are the reference programs for the energy label. Set this wash cycles with a temperature of 40°C or 60°C. They are the most efficient programmes in terms of energy and water consumption for washing normally soiled cotton laundry. The actual water temperature may differ from the declared one.

For all Test Institutes

Long wash cycle for cottons: set wash cycle Cotton with a temperature of 40°C. Synthetic program along: set wash cycle Synthetics with a temperature of 40°C.

This data may differ in your home due to changing conditions in inlet water temperature, water pressure etc. Approximate programme duration values refer to the default setting of the programmes, without options.

- After programme end and spinning with maximum selectable spin speed, in default programme setting.

The washer adapts water, energy and programme duration to your wash load.